



In all cases when fitting to wooden posts using M10X 50 stainless steel coach screws is easy and provide excellent security for the catches.

First set the gate to open both ways by hanging it between the gate posts with about a 40mm gap between the gate and the gate post. Fig.1

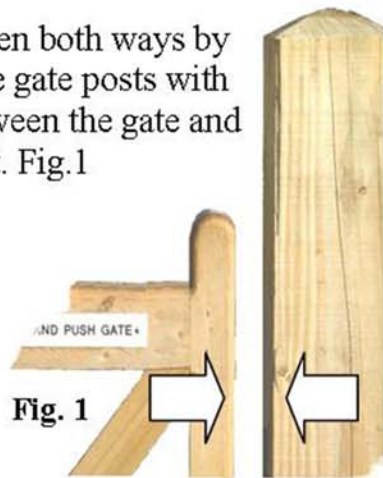

If the gate is to be used by non riding traffic, then the catch should be fitted about 1m. Above the ground. Fig.2

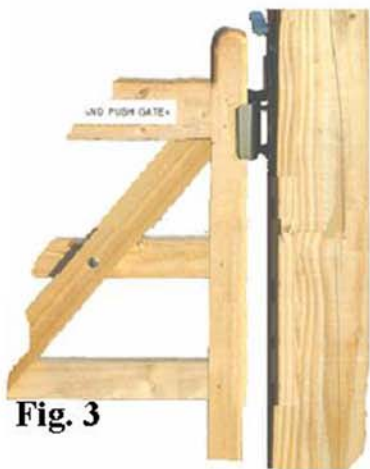

When you have decided the best position for your catch fit the catch to the centre of the gate post using four coach screws. Fig.4

If the gate is to be ridden through, it should be fitted at the top of the gate. so that it can be easily reached from horseback. Fig.3